
## WEB BRACING RECOMMENDATIONS

## MII-WEBBRACE-2

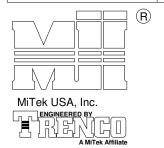

MAXIMUM TRUSS WEB FORCE (lbs.)									
BRACE 8 BAY SIZE	24"O.C. TRUSS SPACING			48"O.C.TRUSS SPACING			72" O.C. TRUSS SPACING		
	BRACING MATERIAL TYPE			BRACING MATERIAL TYPE			BRACING MATERIAL TYPE		
	Α	В	С	Α	В	С	В	С	
10'-0"	1886	1886	2829						
12'-0"	1572	1572	2358	3143	3143	4715	4715	7074	
14'-0"	1347	1347	2021						
16'-0"	1179	1179	1768	2358	2358	3536			
18'-0"	1048	1048	1572				3143	4715	
20'-0"	943	943	1414	1886	1886	2829			

## **GENERAL NOTES**

TYPE	BRACING MATERIALS			
Α	2 X 3 #3, STD, CONST (SPF, DF, HF, OR SP)			
В	2 X 4 #3, STD, CONST (SPF, DF, HF, OR SP)			
С	2 X 6 #3 OR BETTER (SPF, DF, HF, OR SP)			


## FOR STABILIZERS:

FOR A SPACING OF 24" O.C. ONLY, MITEK "STABILIZER" TRUSS BRACING SYSTEMS CAN BE SUBSTITUTED FOR TYPE A, B AND C BRACING MATERIAL. DIAGONAL BRACING FOR STABILIZERS ARE TO BE PROVIDED AT BAY SIZE INDICATED ABOVE. WHERE DIAPHRAGM BRACING IS REQUIRED AT PITCH BREAKS, STABILIZERS WAY BE REPLACED WITH WOOD BLOCKING. SEE "STABILIZER" TRUSS BRACING INSTALLATION GUIDE AND PRODUCT SPECIFICATION.

- 1. DIAGONAL BRACING AND BLOCKING IS REQUIRED TO TRANSFER THE CUMULATIVE LATERAL BRACE FORCE INTO THE ROOF AND/OR CEILING DIAPHRAGM. THE DIAPHRAGM IS AND ANY BLOCKING TO BE DESIGNED BY A QUALIFIED PROFESSIONAL.
- 2. TABULATED VALUES ARE BASED ON LATERAL BRACE CARRYING 2% OF THE WEB FORCE WITH A DOL = 1.15
- 3. DIAGONAL BRACING MATERIAL MUST BE SAME SIZE AND GRADE OR BETTER, AS THE LATERAL BRACE MATERIAL, AND SHALL BE INSTALLED IN SUCH A MANNER THAT IT INTERSECTS WEB MEMBERS AT APPROX. 45 DEGREES AND SHALL BE NAILED AT EACH END AND EACH INTERMEDIATE TRUSS WITH 2 - (0.131"x 3") FOR 2x3 and 2x4 BRACES, AND 3- (0.131"x3") FOR 2x6 BRACES
- 2x6 BRACES.

  4. CONNECT LATERAL BRACE TO EACH TRUSS WITH 2 (0.131"x3") NAILS FOR 2x3 AND 2x4 LATERAL BRACES AND 3 (0.131"x3") FOR 2x6 LATERAL BRACES.

  5. LATERAL BRACE SHOULD BE CONTINUOUS AND SHOULD OVERLAP AT LEAST ONE TRUSS
- SPACE FOR CONTINUITY
- FOR ADDITIONAL GUIDANCE REGARDING DESIGN AND INSTALLATION OF BRACING, CONSULT DSB-89 TEMPORARY BRACING OF METAL PLATE CONNECTED WOOD TRUSSES AND BCSI 1 GUIDE TO GOOD PRACTICE FOR HANDLING, INSTALLING, RESTRAINING & BRACING OF METAL PLATE CONNECTED WOOD TRUSSES, PRODUCED BY STRUCTURAL BUILDING COMPONENT ASSOCIATION. www.sbcindustry.com
  7. REFER TO SPECIFIC MITEK/TRENCO TRUSS DESIGN DRAWING FOR WEB MEMBER FORCE.
  8. BAY SIZE SHALL BE MEASURED IN BETWEEN THE CENTERS OF PAIRS OF DIAGONALS.

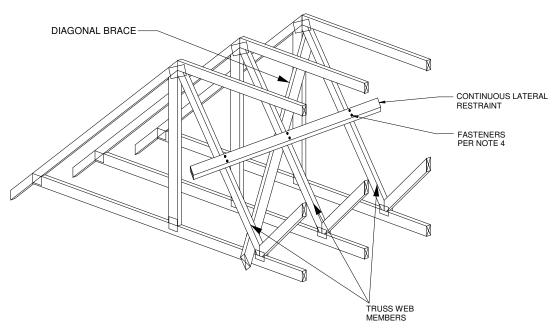

This information is provided to assist in the requirement for permanent bracing of the individual truss web members. Additional bracing may still be required for the stability of the overall roof system. The method shown here is just one method that can be used to provide stability against web buckling. Engineering seal, if any, is supporting the web force chart only.